

Hot Water Dispenser

Instruction Manual

WB-100

OPERATING INSTRUCTIONS

1. Switch is off and thermostat is set at "0" position.
2. Use cool water and fill to at least half of total capacity of the urn
3. Place lid on the machine.
4. Plug the power cord into electric outlet.
5. Turn the power switch "on". The light on the switch will light up to indicate the power is connected.
6. Turn the knob of controller to the temperature that you prefer.
7. The indicator light will be off until the water in the urn starts to heat up.
8. When indicator lights up, the boil process is completed. Hot water is now ready to be served.
9. When the temperature cools down about 10°C or 50°F, the unit will restart and heat up automatically. The indicator will light up again.
10. If you set the thermostat near 100°C (or 212°F) then the unit will maintain a Boiling temperature until user reduces the setting.

CLEANING INSTRUCTIONS

On areas of the heating element, hard water will cause chalk and limestone to accumulate over time. We recommend you de-sediment when you find there are scale sediments at the bottom of the machine.

1. Pour 200ml of fresh lemon juice or concentrated lemon juice into the urn.
2. Wait for 5 minutes to allow the lemon juice to penetrate.
3. You may use a brush with soft bristles to brush the heating element lightly.
4. Repeat steps 1-3 until the limestone is removed.
5. Use a dry cloth to remove the lemon juice away.
6. Rinse with clean water and brush the heating element lightly.




Clean every 4 weeks to ensure the unit will work normally.



Do not touch the outside of the appliance during use! IT IS HOT !!!

IMPORTANT SAFEGUARDS

- *Operator must read these instructions and technical data carefully.
- *Never immerse the machine in water.
- *The unit is for indoor use only. Unit should be placed on a sturdy surface.
- *When the unit is in use, some parts will be very hot. Do not touch.
- *Unplug the cord, when the machine is not being used.
- *Do not disconnect the appliance with wet hands; and do not pull the power cord.



- *The minimum volume to operate must be at least 1/3 of the maximum capacity.
- *The lid must be in a closed position when unit is serving.
- *Never move or carry the unit when it is switched on and/or when containing water.
- *Never wash using high-pressured jet water.
- *All of the important items are marked by  for your attention in the following pages.



Caution! Hot Surface

Specifications:

Model Number	WB-100
Voltage	120 V, 50 -60Hz
Wattage	1350W
Max. Capacity	20 liter
Boil Time for full capacity	Around 60 Min.
Temperature Controller	86-212 F

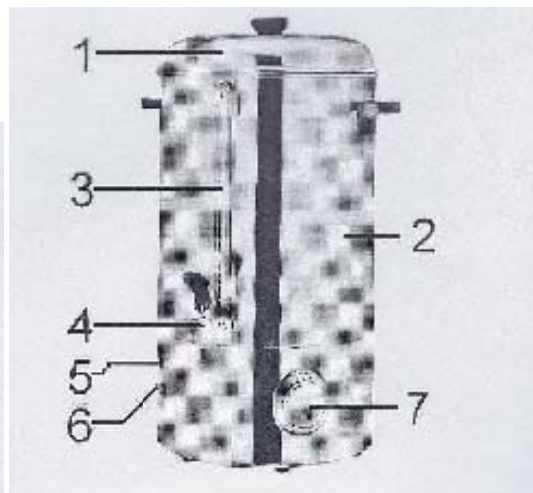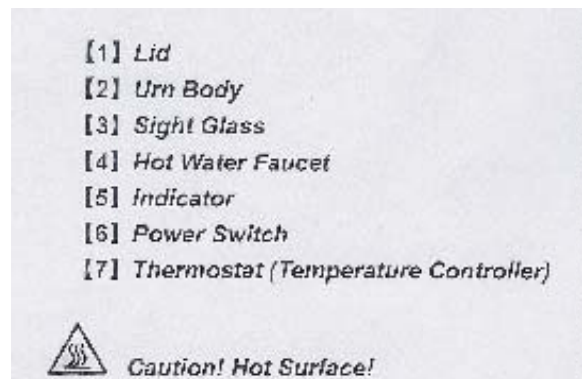

ACE Electrical Equipment One Year Warranty

ACE warrants its equipment against defects in materials and workmanship, subject to the following conditions:

This warranty applies to the original owner only, and is not assignable.

ACE Electrical Equipment is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt, or other proof of purchase is required to obtain warranty coverage.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at ACE's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by ACE, after defective unit has been inspected and defect has been confirmed. ACE does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts where usage, wear, or lack of preventative maintenance may create abnormal replacement rates, and these parts are excluded from this limited warranty.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary. Contact ACE for details at 1-800-223-7750

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage for improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from ACE, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only. Warranty is void if equipment is used in other than a commercial application.

In the event your repair is not covered under the stated warranty provisions, parts are available by calling 1-800-223-7750. Equipment not covered by repair should be picked up from our warehouse facility within 10 business days from notification date. Any and all arrangements and expenses for the return of this merchandise is your responsibility.

“THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN.”