

******* IMPORTANT SAFEGUARDS*******

Model No.: SEJ-22000 (21 Liter) Model No.: SEJ-20000 (17 Liter)

Model No.: SEJ-21000 (21 Liter) Model No.: SEJ-18000 (17 Liter)

AC 120V 100W

Before using electrical appliance, Please read the following important messages:

1. Read this instruction carefully.
2. Never block or close the steam valve under any circumstances, Do not touch hot surface, Please use grips or handles.
3. To prevent electrical shock, do not place the rice warmer, its electrical cord and plug into the water excluding the inner lid and inner pot.
4. Unplug the electric cord from the electrical outlet when the warmer is not in used and before cleaning.
5. Keep away from Children. Rice warmer is not a toy. Be careful with children while the warmer is in use.
6. Before cleaning, taking off or placing parts on, please allow the warmer to coll down and make sure that the warmer is set to OFF.
7. Do not use the warmer with a damaged electric cord. Please return the damaged warmer to the service center for repairing, examination or adjustment.
8. Do not use the warmer outdoor.
9. Do not use any accessories that are not recommended by the appliance manufacturer due to possible hazards.
10. Apply extreme caution when transporting warmer while it is full of hot liquids.
11. Do not allow the electric cord to come in contacxt with hot surfaces.
12. Do not place the warmer near or right on heat source such as gas or electrical stoves, oven, burner or direct sunlight.
13. The rice warmer is designed for warmer rice. Please do not use for any other purpose.
14. To avoid the risk of electrical shock, cook only in removable pot ot container.
15. Always make sure that the electric cord is plugged into a wall socket, and unplug the electric cord when the warmer is not in use.
16. Make sure the the bottom of the inner pot is always kept dry while storing.
17. This warmer is intended solely for commercial use.

CAUTION:

DO NOT PLACE OBJECTS ON THE LID OF THE RICE WARMER WHILE IN OPERATION.

DO NOT TOUCH THE UNIT WHILE IN OPERATION. USE ONLY THE PLASTIC HANDLE OF THE LID WHILE WARMER RICE TO REDUCE THE RISK OF ELECTRICAL SHOCK COOK ONLY IN REMOVABLE CONTAINER.

